

Warning: filectime(): stat failed for /var/www/vhost/www.omal.it/htdocs/https://www.omal.it/./FilesProdotti/UITG0G01-UITG0G01ATX-FogliettoIstruzioniAttuatoriAGO.pdf in /var/www/vhost/www.omal.it/htdocs/prodotto-printable.php on line

Warning: filectime(): stat failed for

/var/www/vhost/www.omal.it/htdocs/https://www.omal.it//PdfProdotti/l16/Istruzioni/ISTRUZIONI USO 8\_0842/8\_0842-Istr\_Attuatori\_Pneumatici\_Omal-03-18.pdf in /var/www/vhost/www.omal.it/htdocs/prodotto-printable.php on line 65

Warning: filectime(): stat failed for /var/www/vhost/www.omal.it/htdocs/https://www.omal.it/./FilesProdotti/UMA800081B-IT-ATTUATOREPNEUMATICODA15-DAN1920-SR15-SRN960-DD-DAV-SRV-07-21.pdf in /var/www/vhost/www.omal.it/htdocs/prodotto-printable.php on line 65

# AGO TWO STAGE -Aluminium two stage

Macro Pneumatic actuators

Category AGO TWO STAGE - Aluminium two stage pneumatic actuator



#### features

#### **TECHNICAL FEATURES**

Metering rotation angle: 45° max.

Max. rotation angle: 92° (-1°, +91°)

Torque (see the corresponding actuator tables).

The code numbers after the letters DDN, always correspond to the breakaway torque in Nm at 5,6 bar air supply.

#### WORKING CONDITION

Temperature: from -20°C to +80°C.


Air supply: 5,6 bar; maximum 8,4 bar.


Actuating media: filtered dry compressed air, not necessarily lubricated. In case of lubricated air, either non detergent oil, NBR compatible oil, must be used.





# dimensions

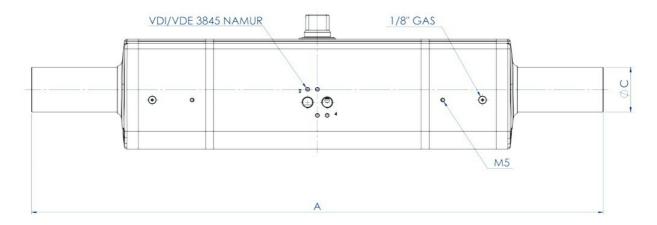

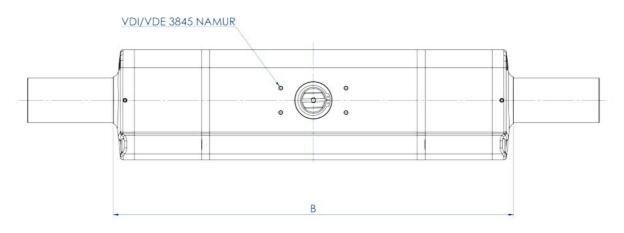


	DATA SHEET									
Code	DDN030401S	DDN030402S	DDN060401S	DDN060402S	<b>DDN106401S</b>	DDN240401S	DDN48040			
Size	<b>DDN 30</b>	DDN 30	DDN 60	DDN 60	<b>DDN 106</b>	DDN 240	<b>DDN 480</b>			
	F03-F05	F04	F04	F05-F07	F05-F07	F07-F10	F10-F12			
A [mm]	355	355	423	423	502	589	702			
B [mm]	245	245	278	278	345	416	491			
C [mm]	29	29	29	29	29	40	55			
Weight	1.8	1.8	2.8	2,8	4.7	8	14.3			
[Kg]	1,0	1,0	2,0	2,0	¬,,,		14,5			



# materials

#### TWO STAGE PNEUMATIC ACTUATOR COMPONENTS SIZE: DDN30 - DDN480

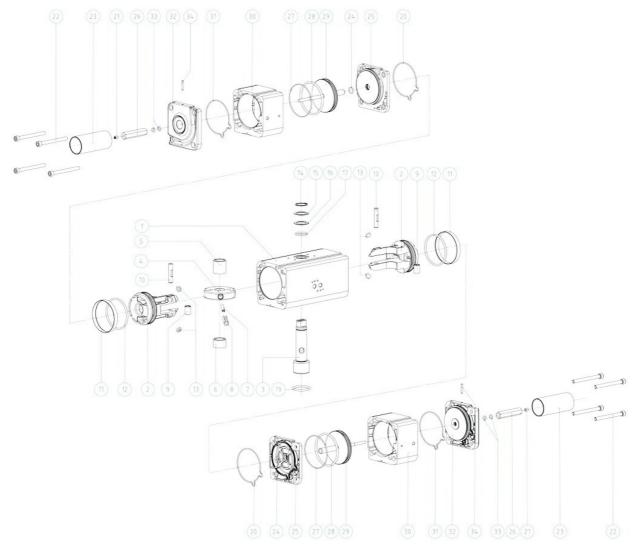




MATERIALS							
Pos	Denomination	Q.ty	Material				
1	Cylinder	1	Aluminium alloy				
2	Piston	2	Aluminium alloy				
3	Shaft	1	Stainless steel				
4	Scotch yoke	1	Steel alloy				
5	Bush	1	Acetalic resin				
6	Bush	1	Acetalic resin				
7	Int.elastic pin	1	Steel alloy				
8	Ext.elastic pin	1	Steel alloy				
9	Bush	2	Steel alloy				
10	Sleeve	2	Steel alloy				
11	Dynamic seal	2	Polyurethan				
12	O-ring	2	Nitrilic rubber				
13	Support disks	4	P.T.F.E. carbo-graphite filled				
14	Seeger	1	Stainless steel				
15	Washer	1	Stainless steel				
16	Ext.support ring	1	Acetalic resin				
17	O-ring	1	FKM				
18	Centering ring (OPTIONAL)	1	Aluminium alloy				
19	O-ring	1	FKM				
20	O-ring	2	Nitrilic rubber				
21	Grub screw	2	Stainless steel				
22	screws	8	Stainless steel				
23	protection	2	Aluminium alloy				
24	Support bush	2	FKM				
25	Intermediate cap	2	Aluminium alloy				
26	Adjusting nut	2	Aluminium alloy				
27	O-ring	2	Nitrilic rubber				
28	O-ring	2	Nitrilic rubber				
29	Auxiliary piston	2	Aluminium alloy				
30	Auxiliary cylinde	2	Aluminium alloy				
31	O-ring	2	Nitrilic rubber				
32	Terminal cap	2	Aluminium alloy				
33	O-ring	4	FKM				
34	Grub screw	2	Stainless steel				



## specifications

#### Working plane

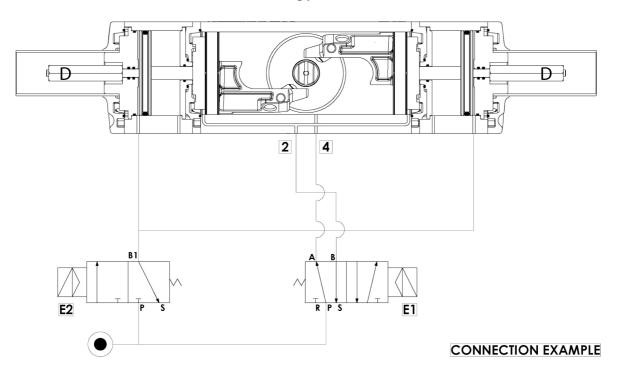

#### General use and working condition

**USE**: Filling and metering of fluids or solids-mix materials by means of a special metering device. Double acting actuator for fine or rough metering.

**EXECUTION:** According to EN ISO 5211, in compliance with EN 15714-3.

**WORKING SYSTEM:** The basic model consists of an Omal double acting actuator, equipped with two additional cylinders whose inner-pistons, by means of a stroke adjustment device, stop the rotating angle of the actuator to a pre-set position, preventing it from a complete rotation and influencing the total valve flow pressure.

This device is driven by two solenoid valves.

E1 = 5/2; E2 =3/2. E1 drives the actuator, while E2 drives the two external cylinders.

Some examples referring to the valves in the drawing above:

- with a completely CLOSED VALVE (0°) You will have:

E1: air supply in A, exhausts in B

E2: exhausts in B1.

- with a completely OPEN VALVE (90°) rough metering You will have:

E1: exhausts in A, air supply in B

E2: exhausts in B1.

When You reach the desired level, e.g. 90% of the total filling, the rough signal (completely open valve) will turn off and the air, flowing through E2 and then changing the position of E1, will get to the external pistons which will move to the desired rotating angle, e.g.  $30^{\circ}$  (fine metering), consequently reducing the total valve flow.

With an OPEN VALVE, e.g.  $30^{\circ}$  fine metering, You will have:

E1: air supply in A, exhaust in B;


E2: air supply in B1


This intermediate position and the corresponding valve flow pressure will be reproduced, whenever you repeat the process.


NOTE: Thanks to control "D", the desired metering can range from 0° to 45°. When the desired level is the same as the actual one, the fine-metering signal on E2 (exhaust in B1) will turn off; the actuator will start moving and make the valve close, completely. Now the filling and metering process is over.

CONCLUSION: "OMAL" device can be assembled wherever you need to furnish exactly the same quantities in long working cycles.



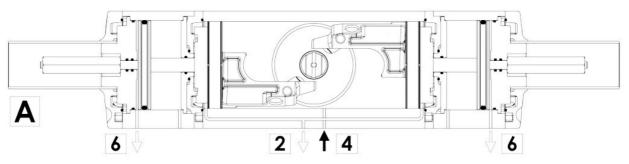

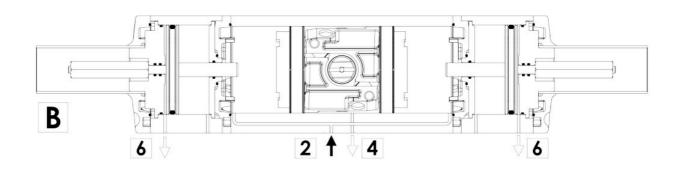

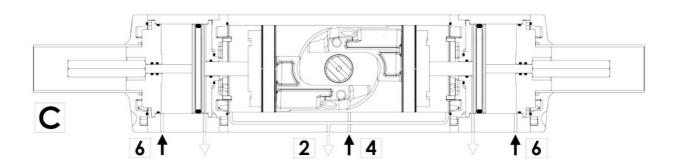

#### A. FULLY CLOSED POSITION

In this position the air is supplied to port 4 with exhaust air at port 2 and 6.

## B. FULLY OPEN POSITION (90° rough metering)

In this position the air is supplied to port 2 with exhaust air at port 4 and 6.

### C. INTERMEDIATE POSITION (fine metering)

In this position the air is supplied to port 6 than to port 4, with exhaust air at port 2. In this case the external pistons will move to the desired rotating angle, consequently reducing the total valve flow.

## OMAL S.p.A. Società Benefit



Headquarters: Via Ponte Nuovo 11, Rodengo Saiano (Brescia) Italy Production site: Via Brognolo 12, Passirano (Brescia) Italy Ph +39 0308900145 Fax +39 0308900423





## documents

Istruzioni

ISTRUZIONI ATEX UITGOGOIATX ISTRUZIONI USO 8\_0842

Manuali

MANUALE UMA800081B